



**Digital Spectrum Solutions**

TM

# **MemoryFrame**

*Wireless Digital Frame*



***Model MF-8000, MF-8104, MF-8115***  
***Premium Edition***  
***User Manual***  
***Version 2.3.0.0***

## Product Introduction

Congratulations! You are the proud owner of a MemoryFrame™ Wireless Digital Picture Frame. Boasting high-quality image resolution the MemoryFrame™ is the perfect product for displaying your favorite digital images, video files, or listening to your favorite MP3's. The MemoryFrame™ includes a patented changeable frame capture system. This allows you to use a standard 8x10 and 15" frame so your MemoryFrame™ never goes out of style. You can decorate as your lifestyle and tastes change, whether in the home or office. The MemoryFrame™ displays images in a slide show format, which may also be accompanied by background music. Embedded 802.11 b/g wireless functionality allows the MemoryFrame™ to seamlessly become part of your home network. This allows the transferring of images, clips, and tracks; no wires, no hassle. The Premium edition of MemoryFrame™ is also web enabled so that you can play or download images from popular photo sharing sites. MemoryFrame™ Premium also works with Windows Vista or Windows XP equipped with Media Player 11 as a sharing device. This way Vista or XP can be your own home sharing site.

## Features

- ✓ Display digital images and videos with or without a computer
- ✓ Listen to MP3 audio while displaying images
- ✓ Built-in stereo speakers with volume control and Mute
- ✓ Built-in 802.11 b/g wireless
- ✓ Bluetooth Capable (Requires Bluetooth USB Dongle – Not Included)
- ✓ The frame is changeable with standard 8x10 and 15" frames. Your choice is unlimited!\*
- ✓ Generous internal memory
- ✓ Web enabled for photo sharing
- ✓ Support for – CF/SD/XD/MMC memory cards
- ✓ Works with Windows Vista® and Windows XP equipped with WMP 11
- ✓ TFT-LCD with high resolution, wide view angle and rich color
- ✓ Easy to use remote control for displaying and managing your content
- ✓ Desktop/Wall Mount
- ✓ Landscape/Portrait

## Package Contents

MemoryFrame™ comes packaged with the following items:

- A. MemoryFrame™ unit
- B. Removable Desktop Stand
- C. A.C. Power Adapter
- D. Remote Control
- E. USB Cable
- F. User Manual
- G. xD Card reader

## Setting up the MemoryFrame™


- A. Open the package and remove the protective foam. Remove the protective sleeve from the unit.
- B. Install the removable Desktop Stand. There are 3 positions, Landscape, Portrait, and Insert/Remove.
- C. Plug in the AC adapter into the power outlet. Plug the other end into the unit.
- D. Turn power to the On position via the Power switch. The Power switch is on the right side of the MemoryFrame™, in the rear.
- E. During Power Up the display will present an opening screen with progress bar. When complete it will play the default slide show.
- F. If the content is stored on a target flash media card, insert the media into the proper slot.

## Connectivity – USB and Media Cards

MemoryFrame™ is equipped with both USB port types for complete USB connectivity. One USB port is used to connect to the PC. In this manner content can be sent to the frame from the PC. In Explorer, the frame will be identified as an external storage device. The other USB port is for connecting devices such as cameras and thumb drives. A CF slot is provided for CF cards and CF adapters. A MMC/SD slot is provided for MMC/SD. An external USB card reader is included to support XD media.


## Remote Control

| Function                                                                          | Description        |
|-----------------------------------------------------------------------------------|--------------------|
|  | Power On/Off       |
| Mute                                                                              | Audio On/Off       |
| Vol+                                                                              | Increase Volume    |
| Vol-                                                                              | Decrease Volume    |
| Back                                                                              | Go back one screen |
| Play                                                                              | Play content       |
| Clock                                                                             | Display Clock      |
| Menu                                                                              | Go to Menu         |
| Enter                                                                             | Enter/Select       |
|  | Left               |
|  | Right              |
|  | Up                 |
|  | Down               |

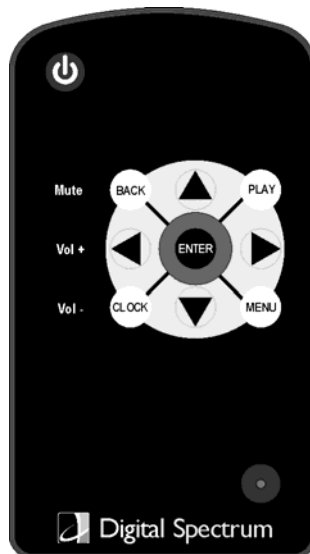

\* U.S. Patent 6,826,863 B1

## Replacing Remote Control Battery

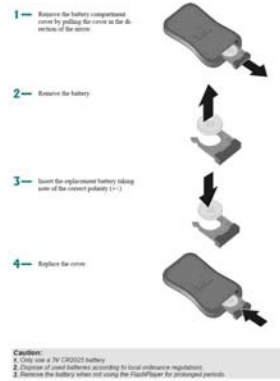

## On Screen Menu Controls

This feature is included so that content can be managed and controlled. The menu system is activated by pressing the Menu button. The Main Menu is shown below.

## Main Menu

The Main Menu is the starting point to navigate to the desired function.

| Function                       | Description                                                                                                                                                                                                             | Sample Screen |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| <b>Picture</b>                 | User can play a picture slideshow. User can specify the source location for picture files and can select specific pictures to play. User can copy pictures to internal memory and delete pictures from internal memory. |               |
| <b>Video</b>                   | User can play Windows Media Video (WMV) files*. User can specify the source location for video and can select specific videos to play. User can copy videos to internal memory and delete videos from internal memory.  |               |
| <b>Music</b>                   | User can play music. User can specify the source location for music files and can select specific songs to play. User can copy music files to internal memory and delete music from internal memory.                    |               |
| <b>Resume Slideshow</b>        | User can resume a slideshow for playback.                                                                                                                                                                               |               |
| <b>Theme</b>                   | Change the background color.                                                                                                                                                                                            |               |
| <b>Settings</b>                | Change MemoryFrame™ settings                                                                                                                                                                                            |               |
| <b>Search wireless network</b> | Search for available wireless networks in the area                                                                                                                                                                      |               |
| <b>Stop music</b>              | Stops music playback. If music is playing selecting “Stop music” will end the music.                                                                                                                                    |               |

\*A WMV Converter utility is included with the MemoryFrame™ CD to allow users to convert different video formats into WMV.

## Pictures

| Function                 | Description                                                                                                                      | Sample Screen                                                                     |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|
| <b>Play slideshow</b>    | Play picture slideshow and specify source location. Playback functions support Play All, Choose Individual, or Pictures by date. |  |
| <b>Copy picture(s)</b>   | Copy pictures from a specified source location into internal memory                                                              |                                                                                   |
| <b>Delete picture(s)</b> | Delete pictures from internal memory                                                                                             |                                                                                   |
| <b>Share picture(s)</b>  | Share pictures from device to another MemoryFrame™ Premium Edition.                                                              |                                                                                   |

### Play Slideshow


When Play Slideshow is selected, the user can specify the location of the picture files.



Note – The entire list of media sources may not be displayed. MemoryFrame™ will only display the removable media types which are inserted and have media files.


### Picture Selection

When a source location is selected, the user can specify playing all the pictures found or individual photo selections.
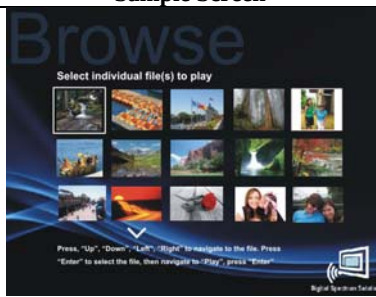
| Function                            | Description                                                                                              | Sample Screen                                                                        |
|-------------------------------------|----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| <b>Play all picture(s)</b>          | Play all the pictures found in the source location                                                       |  |
| <b>Choose individual picture(s)</b> | Select specific pictures for playback, once selection is complete, press 'Play' button in remote control |                                                                                      |
| <b>Choose by Date</b>               | Play slideshow by date stamp of image                                                                    |                                                                                      |

### Choose Individual Picture(s)

Press the arrow keys to navigate to the desired pictures. Press ENTER to select a picture. Press ENTER again to unselect a picture. Once all the selections have been made, press 'Play' in remote control or navigate to Play option and press ENTER.

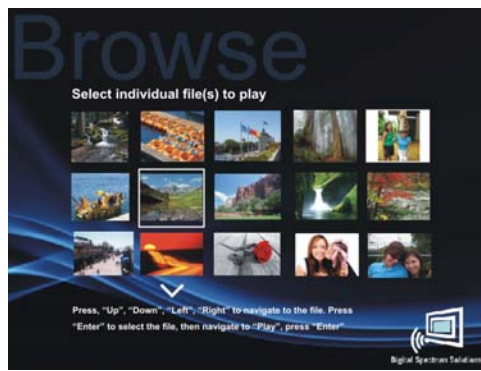

## Video

MemoryFrame™ can play properly formatted WMV video files. A WMV converter utility is provided on the software CD to ensure a consistent video experience, and to allow compatibility with a variety of popular video formats. From the Main Menu, navigate to Video and press ENTER.



The Video Menu features the option to play a specific video file as well as the ability to copy video files into MemoryFrame's™ internal memory or delete video files from internal memory. The procedures to play, copy, or delete video files are the same as the corresponding procedures to play, copy, or delete picture files.



*Note: Video playback over a network is not currently supported. Video files must originate from internal memory or removable media inserted into MemoryFrame™.*

## Music

MemoryFrame™ can play MP3 and WMA music files. From the Main Menu, navigate to Music and press ENTER.



The Music Menu features the option to create a song list, as well as the ability to copy music files into MemoryFrame's™ internal memory or delete music files from internal memory.

Press 'Select new song list' to select songs that will be added to the song list.



The procedures to play, copy, or delete music files are the same as the corresponding procedures to play, copy, or delete picture files.



## Playing Background Music during Picture Slide Show

While a song list is being played, the user can resume the previous picture slideshow by pressing the PLAY button on the remote control. Volume can be adjusted using the Vol+ and Vol- buttons on the remote control. During slideshow playback, volume can also be adjusted by pressing the up and down arrow buttons on the MemoryFrame™. To stop music press Menu, then select Stop Music.

## Settings

This function is used to personalize the frame operation and configuration. This includes slideshow, photo sharing, set clock, sleep settings, language, orientation, network information, and automatic updates.



From the Main Menu, navigate to Settings and press ENTER.

| Function                  | Description                                                                                                                                                             | Sample Screen                                                                         |
|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <b>Resume slideshow</b>   | Exits the Settings menu and resumes playback of previous picture slideshow                                                                                              |    |
| <b>Frame orientation</b>  | Toggles between landscape (horizontal) and portrait (vertical) display settings                                                                                         |    |
| <b>Slideshow Settings</b> | Sets slideshow preferences, including slide duration, transition type, picture order, and music options                                                                 |   |
| <b>Slide Duration</b>     | This is used to set the slideshow timing. The setting are 5, 10, 15, 30 seconds, and 1, 5, 30 minutes, and 1 hour.                                                      |  |
| <b>Slide Transition</b>   | This lets you select the transition style between images in a slideshow. There are 12 settings. One of them is Random, which randomizes transitions during a slideshow. |  |

|                                           |                                                                                                                                                                         |                                                                                       |
|-------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <p><b>Picture Order</b></p>               | <p>This lets you select the ordering of images during a slideshow. The selections are sequential or random.</p>                                                         |     |
| <p><b>Music Option</b></p>                | <p>This lets you select the way music is played. This includes Music order and loop control.</p>                                                                        |    |
| <p><b>Auto Slideshow Update</b></p>       | <p>This lets the frame automatically update a slideshow when new images are added to a photo sharing account.</p>                                                       |   |
| <p><b>Show Online Status</b></p>          | <p>This is a small antenna icon in the lower right of the screen that shows whether the network is connected or not. When set to No, the antenna icon is not shown.</p> |  |
| <p><b>Play received Pictures only</b></p> | <p>This lets you play all pictures from a photo sharing site, or just newly added images. If set to No, all pictures will be played.</p>                                |  |

|                                          |                                                                                                                                                                                                         |                                                                                       |
|------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <p><b>Prompt me for new Pictures</b></p> | <p>This lets you approve each picture that is in your photo sharing account and prompts you when a new image has arrived. When set to No new pictures will automatically be added to the slideshow.</p> |     |
| <p><b>Video Repeat</b></p>               | <p>This lets you set the loop control for video playback. When set to No, video will be played once. When set to Yes, the video will loop.</p>                                                          |    |
| <p><b>Set time</b></p>                   | <p>Sets the date and time.</p>                                                                                                                                                                          |   |
| <p><b>Set time zone</b></p>              | <p>Specify the local time zone</p>                                                                                                                                                                      |  |
| <p><b>Language</b></p>                   | <p>Specify the language.</p>                                                                                                                                                                            |  |

|                                |                                                                                                                                                                                                                                    |                                                                                       |
|--------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <b>Configure Photo Sharing</b> | <p>Enter User Account information for photo sharing site. User may enter more than 1 account. User may also input RSS Feeds by inserting RSS URL.</p>                                                                              |     |
| <b>Network Info</b>            | <p>Displays network status and configuration information</p>                                                                                                                                                                       |    |
| <b>Check Updates</b>           | <p>Checks if a software update is available. This feature requires an Internet connection.</p>                                                                                                                                     |   |
| <b>Copyright &amp; about</b>   | <p>Click on “About” to get frame information, including FrameID, Frame Email, Software version #, Firmware version #.</p>                                                                                                          |  |
| <b>Register your frame</b>     | <p>To register your frames go to <a href="http://www.MemoryFrame.com">http://www.MemoryFrame.com</a> and sign up for a free account. This allows pushing albums/pictures to the frame from MemoryFrame.com photo sharing site.</p> |  |

|                                        |                                                                                                                                                                                        |                                                                                       |
|----------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| <p><b>Auto check update</b></p>        | <p>Toggles Auto Update checking. Press <b>Enter</b> to toggle between On/Off.</p>                                                                                                      |    |
| <p><b>Set standby time</b></p>         | <p>This lets you set the time to “sleep” and “wake”. In this way the frame will automatically turn Off and On at a time you desire. The Enable Standby activates the Sleep timing.</p> |    |
| <p><b>Daylight time</b></p>            | <p>Set frame to synchronize with world clock (with Daylight saving time)</p>                                                                                                           |   |
| <p><b>Reset Frame ID</b></p>           | <p>This is used in the possible case where 2 frames have the same ID. When reset, a new frame ID is generated. This is a rare condition.</p>                                           |  |
| <p><b>Restore factory settings</b></p> | <p>Restore all setting to default</p>                                                                                                                                                  |  |

|                         |                                                                                                                               |                                                                                    |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| <p><b>Bluetooth</b></p> | <p>Allows Bluetooth connectivity to either Accept all pictures (Default), Reject all pictures, or by prompt upon receipt.</p> |  |
|-------------------------|-------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|

## Network Requirement:

If your home network already has a wireless router, you are set. If your home network has a regular router, you need to purchase a wireless access point. Please refer to the manufacturer of the router and access point to configure them.

## Test your Network/Access Point:

- Use your computer to connect to the router/access point, and make sure you can get on the internet.
- From the Digital Picture Frame with slideshow playing:
  - Press 'Menu' on the remote control to go to the Main Menu
  - Navigate to 'Pictures' and press 'Enter'
  - Navigate to 'Play Slideshow' and press 'Enter'
  - Navigate to 'Photo Sharing site' and press 'Enter'
  - If 'Which site would you prefer' screen is displayed, your network is OK
  - If not, a list of access points will be displayed
  - Select your access point.
  - Important: If your access point is configured with 'WPA-PSK' or 'WPA'. *The pass phrase is case sensitive.*
  - If your access point is secure, a 'Security key' screen will display. Use the 'left', 'right', 'up', 'down' buttons to navigate the keyboard. Once the key is highlighted, press 'Enter' button to select the character. If you enter the wrong character, select 'BS' to clear the character.
  - Navigate to 'SHIFT' key and press 'Enter' on the remote control for capital letters or other characters.
  - Navigate to 'SHIFT' key and press 'Enter' on the remote control to return to current keyboard.
  - Once, you are done entering the security key, select 'NEXT' on the keyboard, and press 'Enter' button on the remote control.
  - Digital Picture Frame will attempt to connect to your wireless network. It will take a few minutes. If the connection is successful, the 'Which site would you prefer' screen will display. If it is not successful, repeat the above procedure. If it fails again, try to place the Digital Picture Frame closer to your router/access point.
  - Navigate to 'From FrameChannel' and press 'Enter'. The display will present an access code for FrameChannel if the network and internet connection are operating properly.
  - If no access code is displayed, or you encountered an error, please do the following:
    - The Digital Picture Frame might be too far away from the access point. Move it closer.
    - Wrong security key might be used. Check your access point security key and repeat the above procedure.

## Auto Configure your Digital Picture Frame:

You will need a computer to auto configure your Digital Picture Frame.

- Insert the included CD into a CD-ROM drive of your computer,
- Go to the folder 'Auto Configuration'
- Double click Setup.exe to install Auto Configuration to your computer.
- Follow the instructions to complete the installation
- After the installation is complete, go to 'Start' menu in your computer, 'Auto Configuration – Digital Spectrum Inc', and launch 'Auto Configuration – Digital Spectrum Inc'.
- Follow the instruction in the tool to configure your Digital Picture Frame.

## Photo Sharing

MemoryFrame™ is web enabled; allowing content to be retrieved over the Internet if a network connection is available. The MemoryFrame™ Premium Edition is also capable of sharing pictures to another MemoryFrame™ Premium Edition. MemoryFrame™ is pre-configured to be compatible with several popular photo sharing sites such as Flickr, FrameChannel, Microsoft Live Space, Webshots, and MemoryFrame.com. As other sites are integrated, updates will be posted at [www.dsicentral.com](http://www.dsicentral.com).

## Photo Sharing Account Set Up

In order to connect to a photo sharing website, you must first set up a user account. Sign up and picture upload/share procedures may vary from site to site. Please refer to each respective website for procedures.

## Configure MemoryFrame™ for Photo Sharing

After a photo sharing account has been set up and pictures have been uploaded to be shared, MemoryFrame™ can be configured to access those pictures. Refer to the **Settings** section of this User Guide for detailed procedures on configuration settings.

## Save Picture while Playing Slideshow

While slideshow is playing, press 'Enter' in remote control, then press 'Yes' to save current slide to memory.

## Play Pictures from a Photo Sharing Site

Once MemoryFrame™ has been properly configured for specific photo sharing sites and an internet connection is available, MemoryFrame™ is ready to play pictures from the photo sharing site.

Follow the previous procedures on playing a slideshow. When prompted for the source location for your pictures, navigate to "Photo sharing site" and press ENTER. MemoryFrame™ will search for available networks and display a list of available WiFi Routers, including indicators for security detected and signal strength.



MemoryFrame™ will automatically save connection settings for the networks which have been previously accessed, so that the user will not need to re-enter them every time a connection is made.

If MemoryFrame™ does not have the selected network security information cached, it will prompt the user to specify additional information such as the type of authentication which is required to connect to the wireless access point and an encryption key, if necessary. An on-screen keyboard will appear so that a security key can be entered. MemoryFrame™ supports connectivity to unsecured, WEP, and WPA networks.

*Note: Some network management utilities allow users to enter a pass phrase to generate a security key. MemoryFrame™ requires the actual security key to be entered.*

*If WPA security mode is used, the pass phrase is case sensitive'*

*If the SSID of your wireless router is not displayed, configure your wireless router to broadcast its SSID.*

### To Search for other Wireless Network:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Search wireless network' and press 'Enter'
- A list of wireless networks will be displayed.
- Navigate to the one of your choice and press 'Enter' to connect

Enter the security key if necessary

### Get a FREE account

If you don't have an account with [www.MemoryFrame.com](http://www.MemoryFrame.com), go to [www.MemoryFrame.com](http://www.MemoryFrame.com) and create your account. Once you have an account, login and upload your pictures. You can also set caption for each slide, the picture with caption will be sent to the frame.

### Register your Digital Picture Frame

- Press 'Menu' on the remote control to go to the Main Menu
- Use 'Up' 'Down' buttons on the remote control to select 'Settings' and press 'Enter'
- Navigate to 'Register your frame' and press 'Enter'
- Follow the on-screen instruction to register your frame.
- After registration is complete, the frame email address is displayed.

### Push Slideshow to your Digital Picture Frame

After you have registered your Digital Picture Frame, it will be available in [www.MemoryFrame.com](http://www.MemoryFrame.com). You can manage your frame, you can invite others to send pictures to your frame, you can change the email address of your frame, or you can send pictures directly to your frame.

Or, you can email with picture attachments directly to your frame.

## Play Slideshow from Photo Sharing Site:

### A. From MemoryFrame.com

#### Get a FREE account

Sign up for a free account at [www.MemoryFrame.com](http://www.MemoryFrame.com). You can upload your favorite pictures and send them directly to your frame. Give it a try, it's FREE.



#### Configure Digital Picture Frame:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Configure photo sharing' and press 'Enter' on the remote control
- Navigate to 'Set MemoryFrame info' and press 'Enter' on the remote control
- Enter your *MemoryFrame* username. Use the 'left', 'right', 'up', 'down' buttons to navigate the keyboard. Once the key is highlighted, press 'Enter' button to select the character. If you enter the wrong character, select 'BS' to clear the character.
- Once, you are done entering your *MemoryFrame* username, navigate to 'NEXT' on the keyboard, and press 'Enter' button on the remote control to go to *Enter your password* screen
- Enter your *MemoryFrame* password. Use the 'left', 'right', 'up', 'down' buttons to navigate the keyboard. Once the key is highlighted, press 'Enter' button to select the character. If you enter the wrong character, select 'BS' to clear the character.
- Once, you are done entering your password, navigate to 'NEXT' on the keyboard, and press 'Enter' button on the remote control to go to the previous menu.
- Your Digital Picture Frame is now ready to retrieve pictures from MemoryFrame.com.


#### Retrieve your Pictures:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Pictures' and press 'Enter'
- Navigate to 'Play Slideshow' and press 'Enter'
- Navigate to 'Photo Sharing website' and press 'Enter'
- Navigate to 'From MemoryFrame' and press 'Enter' on the remote control
- At the All albums screen 'Select all Photos' to display all your pictures in all albums.
- Select 'Play All' to play all the pictures in your album or play individual pictures by using the Arrow buttons to navigate to the desired picture then press 'Enter' on the remote control to select/deselect picture. Repeat this until all the desired pictures are selected. Navigate to 'PLAY' and press 'Enter' on the remote control. Now only the selected images will display.
- At the All albums screen choose your albums by using the Arrow buttons to navigate to the selected picture then press 'Enter' on the remote control to select/deselect Image. When you are done selecting your albums, scroll back to 'Select' and press 'Enter' on the remote control, your album or albums will open.
- Select 'Play All' to play all the pictures in your album or play individual pictures by using the Arrow buttons to navigate to the desired picture then press 'Enter' on the remote control to select/deselect picture. Repeat this until all the desired pictures are selected. Navigate to 'PLAY' and press 'Enter' on the remote control. Now only the selected images will display.
- 

### B. From FrameChannel

#### Get a FREE account

If you don't have an account with FrameChannel, go to <http://www.framechannel.com>. Click on 'Create an account' button to create your account. Then, enter your FrameChannel PIN. It is needed to configure the Digital Picture Frame. Click on 'My feed address' and enter the 4 digit PIN for your account. Once you have an account, login and click on 'Upload photos' to upload your pictures.

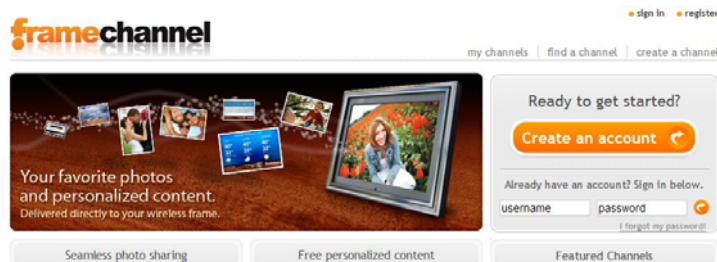

#### Configure Digital Picture Frame:

When setting up for the first time, it is recommended that both the MemoryFrame and internet connected PC be easily available.

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Pictures' and press 'Enter' on the remote control
- Navigate to "Play Slideshow" press Enter on the remote control

- Navigate to “Photo sharing website” press Enter on the remote control
- You will then see a list of website select FrameChannel press enter on the remote control.
- The MemoryFrame display presents an activation code which is up to six digits and is case sensitive.
- Log In to your FrameChannel account from the PC.
- Select the “My Account” link (top right of screen).
- Select “Frame Activation”
- Scroll down to the blank box named “Code”. Insert the activation code from the MemoryFrame display. Remember it is case sensitive. When done, select Save. This will pair the account with your frame.
- Go back to the MemoryFrame and Press Enter to clear the activation page.
- The MemoryFrame is now ready to retrieve pictures from FrameChannel photo sharing site

## Retrieve your Pictures:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Pictures’ and press ‘Enter’ on the remote control
- Navigate to ‘Play Slideshow’ and press ‘Enter’ on the remote control
- Navigate to ‘Photo Sharing website’ and press ‘Enter’ on the remote control
- Navigate to ‘From FrameChannel’ and press ‘Enter’ on the remote control, the MemoryFrame will begin to retrieve media to display.

## C. From Windows Live FrameIt

### Get a FREE account

If you don’t have an account with Windows Live FrameIt, go to <http://frameit.live.com>. Click on ‘Create your space’ button to create one. Once you have an account, click on ‘Go to your space’ button. Login and upload your album.

See example:



## Configure Digital Picture Frame:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Configure photo sharing’ and press ‘Enter’ on the remote control
- Navigate to ‘Set Windows Live Framelt site info’ and press ‘Enter’ on the remote control
- Enter your Windows Live Feed ID. (See Note)

To enter your Feed ID use the ‘left’, ‘right’, ‘up’, ‘down’ buttons on the Remote Control to navigate the keyboard. Once the key is highlighted, press ‘Enter’ button to select the character. If you enter the wrong character, select ‘BS’ to clear the character.

- Navigate to ‘SHIFT’ key and press ‘Enter’ on the remote control for capital letters or other characters.
- Navigate to ‘SHIFT’ key and press ‘Enter’ on the remote control to return to current keyboard.
- Once, you are done entering your Windows Live Feed ID, navigate to ‘NEXT’ on the keyboard, and press ‘Enter’ button on the remote control.

Your Digital Picture Frame is now ready to retrieve pictures from Windows Live FrameIt photo sharing site.

**(Note):** To view your Windows Live Feed ID, use a PC and login to your Windows Live FrameIt account and click on 'Set up a frame' You will see Feed ID. Enter this ID into the MemoryFrame.


## Retrieve your Pictures:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Pictures’ and press ‘Enter’
- Navigate to ‘Play Slideshow’ and press ‘Enter’
- Navigate to ‘Photo Sharing website’ and press ‘Enter’
- Navigate to ‘From Windows Live Framelt’ and press ‘Enter’ on the remote control
- Choose your picture by pressing ‘Enter’ on the remote control to select/deselect it. When you are done, press ‘Play’ on the remote control to play selected picture(s). Or navigate to ‘Play All’ and press ‘Enter’ on the remote control to play all the pictures

## D. From Webshots:

### Get a FREE account

If you don't have an account with Webshots, go to <http://www.webshots.com> and create your account. Once you have an account, upload your pictures. See example:

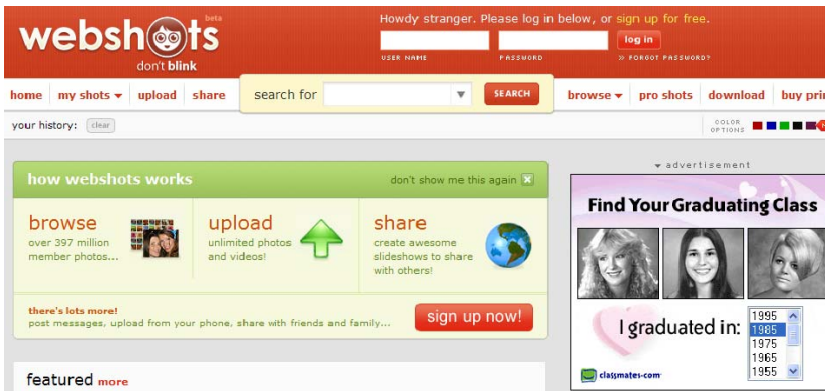

### Configure Digital Picture Frame:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Configure photo sharing' and press 'Enter' on the remote control
- Navigate to 'Set Webshots site info' and press 'Enter' on the remote control.
- Navigate to 'Add new id' and press 'Enter' on the remote control
- To enter your *Webshots* User ID. Use the 'left', 'right', 'up', 'down' buttons to navigate the keyboard. Once the key is highlighted, press 'Enter' button to select the character. If you enter the wrong character, select 'BS' to clear the character.
- Navigate to 'SHIFT' key and press 'Enter' on the remote control for capital letters or other characters.
- Navigate to 'SHIFT' key and press 'Enter' on the remote control to return to current keyboard.
- Once, you are done entering your *Webshots* User ID, navigate to 'NEXT' on the keyboard, and press 'Enter' button on the remote control to go to the 'Enter password' screen.
- Enter your *Webshots* password.
- Once, you are done entering your *Webshots* password, navigate to 'NEXT' on the keyboard, and press 'Enter' button on the remote control to go to the previous menu.
- Your Digital Picture Frame is now ready to retrieve pictures from Webshots photo sharing site

### Retrieve your Pictures:


- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Pictures' and press 'Enter'
- Navigate to 'Play Slideshow' and press 'Enter'
- Navigate to 'Photo Sharing website' and press 'Enter'
- Navigate to 'From Webshots' and press 'Enter' on the remote control
- At the All albums screen choose your albums by using the Arrow buttons to navigate to the selected picture then press 'Enter' on the remote control to select/deselect Image. When you are done selecting your albums, scroll back to 'Select' and press 'Enter' on the remote control, your album or albums will open.
- Select 'Play All' to play all the pictures in your album or play individual pictures by using the Arrow buttons to navigate to the desired picture then press 'Enter' on the remote control to select/deselect picture. Repeat this until all the desired pictures are selected. Navigate to 'PLAY' and press 'Enter' on the remote control. Now only the selected images will display.

## E. From Flickr:

### Get a FREE account

If you don't have an account with Flickr, go to <http://www.flickr.com> and create your account. Once you have an account, upload your pictures.

See example to create an account:

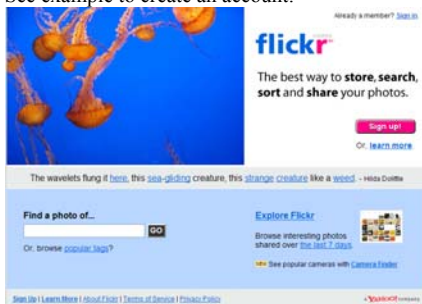

See example to upload pictures:



See example on how to upload pictures. Set all your pictures *privacy settings* to ‘public’



## Upload photos to Flickr

**You have used**  
2%  
of your upload capacity for this calendar month.  
You have a **limit** of 100 MB per month.  
Your upload limit is measured in bandwidth, or "throughput", not actual storage space. [More information...](#)

**Find the image(s) you want on your computer**  
(Free accounts have a limit of 5MB per photo)

- [Browse...](#)
- [Browse...](#)
- [Browse...](#)
- [Browse...](#)
- [Browse...](#)
- [Browse...](#)

**Add tags for ALL these images** [\[?\]](#)

**Choose the privacy settings** [\[?\]](#)

☐ Private  
☐ Visible to Friends  
☐ Visible to Family  
☒ Public

**Uploading tools**  
We provide tools for Mac and Windows to make it easy to upload a batch of photos all at once.

## Configure Digital Picture Frame:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Configure photo sharing’ and press ‘Enter’ on the remote control
- Navigate to ‘Set Flickr site info’ and press ‘Enter’ on the remote control
- Navigate to ‘Add new id’ and press ‘Enter’ on the remote control
- Enter your *Flickr* User ID. Use the ‘left’, ‘right’, ‘up’, ‘down’ buttons to navigate the keyboard. Once the key is highlighted, press ‘Enter’ button to select the character. If you enter the wrong character, select ‘BS’ to clear the character.
- Navigate to ‘SHIFT’ key and press ‘Enter’ on the remote control for capital letters or other characters.
- Navigate to ‘SHIFT’ key and press ‘Enter’ on the remote control to return to current keyboard.
- Once, you are done entering your *Flickr* User ID, navigate to ‘NEXT’ on the keyboard, and press ‘Enter’ button on the remote control to go to the previous menu.
- Your Digital Picture Frame is now ready to retrieve pictures from Flickr photo sharing site

## Retrieve your Pictures:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Pictures’ and press ‘Enter’
- Navigate to ‘Play Slideshow’ and press ‘Enter’
- Navigate to ‘Photo Sharing website’ and press ‘Enter’
- Navigate to ‘From Flickr’ and press ‘Enter’ on the remote control
- At the Choose search option screen choose one of the option available. Search all, Search by set or Search by tag.
- If you choose **Search all**, choose ‘PLAY ALL’ to play all your pictures or choose your pictures by using the Arrow buttons to navigate to the selected picture then press ‘Enter’ on the remote control to select/deselect picture. When you are done selecting your pictures, scroll back to ‘PLAY’ and press ‘Enter’ on the remote control. Or select ‘Play All’ to play all the pictures. Now the images will display.
- If you choose **Search sets**, choose your set by using the Arrow buttons to navigate to the selected Set, then press ‘Enter’ on the remote control to select/deselect set. When you are done selecting your set, scroll back to ‘SELECT’ and press ‘Enter’ on the remote control. Now your set or sets will Open.
- Select ‘Play All’ to play all the pictures in your album or play individual pictures by using the Arrow buttons to navigate to the desired picture then press ‘Enter’ on the remote control to select/deselect picture. Repeat this until all the desired pictures are selected. Navigate to ‘PLAY’ and press ‘Enter’ on the remote control. Now only the selected images will display.
- If you choose **Search by tag**, enter your tag name at the Enter tag info screen. Once you are done entering your *tag name*, navigate to ‘NEXT’ on the keyboard and press ‘Enter’ button on the remote control. This will take you to the Search by tag screen.

At the Search by tag screen, choose ‘Play All’ to play all the tag images or you can choose your tag by using the Arrow buttons to navigate to the selected picture then press ‘Enter’ on the remote control to select/deselect tag. When you are done selecting your tag or tag’s, scroll back to Play and press ‘Enter’ on the remote control or navigate to. Now the tagged images will display.

## Play Slideshow from Media Server (Windows Media Player 11)

### Supported Media Server:

Windows XP or Vista (Home Premium, Business, and Ultimate) *Windows Media Player 11 is required for Windows XP.*

## Configure Media Server:

Launch Windows Media Player 11

### Access right:

- Click on 'Library' and select 'Media Sharing...'
- Click on the 'Settings' button, place check on check box 'Allow new devices and computers automatically (not recommended)'. Click on 'OK' button.
- Place check on check box 'Share my media to'. Click 'OK' button.

### Media sharing:

- Click on 'Library' and select 'Add to library...'. Select button 'My personal folders'. Click on 'OK' button.

### Add your media:

- Go to your computer local drive (C: or D:).
- Go to 'Documents and Settings' folder.
- Go to 'All Users' folder.
- Go to 'Shared Documents' folder.
- For audio clips, go to 'Shared Music' folder, add your music clips.
- For pictures, go to 'Shared Pictures', add your pictures.

## Retrieve your Pictures from your Media Server:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Pictures' and press 'Enter'
- Navigate to 'Play Slideshow' and press 'Enter'
- Navigate to 'From WinXP or Vista' and press 'Enter' on the remote control
- A list of media servers, discovered in your network will be displayed.
- Navigate to the one of your choice and press 'Enter' on the remote control
- A list of option will be displayed

### Pictures by tag:

- All pictures will be organized by tags.
- *For WinXP, only the 'No Keyword' tag is supported.*
- Choose your tag and press 'Enter'.
- A list of pictures that are identified by the tag will be displayed.
- Press 'Play' to start the slideshow.

### Pictures by date taken:

- All pictures will be organized by year, month, and day.
- Choose the year and press 'Enter'.
- Choose the month and press 'Enter'.
- Choose the day and press 'Enter'.
- A list of pictures that are identified by the 'date taken' will be displayed.
- Press 'Play' to start the slideshow.

### Pictures by folder:

- Navigate to the folder of your choice, and press 'Enter'.
- A list of pictures in the selected folder will be displayed.
- Press 'Play' to start the slideshow.

### Pictures by rating:

- All pictures will be organized by rating (Not rated, 1 star, 2 star, 3 star, 4 star, or 5 star).
- *For WinXP, only the 'Not rated' is supported.*
- Navigate to the rating of your choice, press 'Enter'.
- A list of pictures that are identified by the rating will be displayed.
- Press 'Play' to start the slideshow.

## Play Slideshow from Memory Card

### Automatic slideshow:

Insert a memory card (CF card, USB drive, SD/MMC card) into the back of your Digital Picture Frame, all pictures in your memory card will be played.

## Play content, copy content, or delete content from internal storage, CF storage, USB storage, or SD/MMC storage

### Pictures:

- Press 'Menu' on the remote control to go to the Main Menu
- To play slideshow, copy pictures or delete pictures, navigate to 'Pictures' and press 'Enter'

In the next screen:

- To play slideshow, navigate to 'Play Slideshow' and press 'Enter'
- To copy pictures, navigate to 'Copy pictures' and press 'Enter'
- To delete pictures, navigate to 'Delete pictures' and press 'Enter'

In the next screen:

- To play slideshow from internal memory, navigate to 'Internal memory' and press 'Enter'
- To play slideshow from memory cards, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To copy pictures, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To delete all pictures, navigate to 'Delete all pictures from memory' and press 'Enter'
- To delete selected pictures, navigate to 'Delete selected pictures from memory' and press 'Enter'

In the next screen:

- To play all pictures, navigate to 'Play all pictures' and press 'Enter'
- To play selected pictures, navigate to 'Choose individual pictures' and press 'Enter'
- To sort pictures by date, navigate to 'Choose picture(s) by date' and press 'Enter'. Then select the date by pressing 'Enter' on the remote control to select/deselect it. When you are done, navigate to 'Select' and press 'Enter' on the remote control.
- To copy all pictures, navigate to 'Copy all pictures to memory' and press 'Enter'
- To copy selected pictures, navigate to 'Copy selected picture(s) to memory' and press 'Enter'
- To delete all pictures, navigate to 'Delete all picture(s) from memory' and press 'Enter'
- To delete selected pictures, navigate to 'Delete selected picture(s) from memory' and press 'Enter'

In the next screen:

- Use navigation buttons to select the pictures, press 'Enter' to select/deselect it.
- To play selected pictures, press 'Play' in remote control or navigate to 'PLAY' icon, and press 'Enter'
- To copy selected pictures, press 'Play' in remote control or navigate to 'COPY' icon, and press 'Enter'
- To delete selected pictures, press 'Play' in remote control or navigate to 'DELETE' icon, and press 'Enter'

#### **Video:**

- Press 'Menu' on the remote control to go to the Main Menu
- To play video, copy video or delete video, navigate to 'Video' and press 'Enter'

In the next screen:

- To play video, navigate to 'Play video file' and press 'Enter'
- To copy video, navigate to 'Copy video file(s) to memory' and press 'Enter'
- To delete video, navigate to 'Delete video files from memory' and press 'Enter'

In the next screen:

- To play video from internal memory, navigate to 'Internal memory' and press 'Enter'
- To play video from memory cards, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To copy video, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To delete all video, navigate to 'Delete all video file(s) from memory' and press 'Enter'
- To delete selected video, navigate to 'Delete selected video file(s) from memory' and press 'Enter'

In the next screen:

- Navigate to your video and press 'Enter' to play
- To copy all videos, navigate to 'Copy all video file(s) to memory' and press 'Enter'
- To copy selected videos, navigate to 'Copy selected video file(s) to memory' and press 'Enter'
- To delete all videos, navigate to 'Delete all video file(s) from memory' and press 'Enter'
- To delete selected videos, navigate to 'Delete selected video file(s) from memory' and press 'Enter'

In the next screen:

- Use navigation buttons to select the video, press 'Enter' to select/deselect it.
- To copy selected video, navigate to 'COPY' icon, and press 'Enter'
- To delete selected video, navigate to 'DELETE' icon, and press 'Enter'

#### **Music:**

- Press 'Menu' on the remote control to go to the Main Menu
- To play music, copy music or delete music, navigate to 'Music' and press 'Enter'

In the next screen:

- To play music, navigate to 'Play music' and press 'Enter'
- To copy music, navigate to 'Copy music file(s) to memory' and press 'Enter'
- To delete music, navigate to 'Delete music file(s) from memory' and press 'Enter'

In the next screen:

- To play previous song list, navigate to 'Play previous song list' and press 'Enter'
- To play new song list, navigate to 'Select new song list' and press 'Enter'
- To toggle song list with ID3 tag, navigate to 'Show ID3 tag - off' or 'Show ID3 tag - on' and press 'Enter'
- To play background music, 'Show ID3 tag - off' should be displayed
- To copy music, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To delete all music, navigate to 'Delete all music file(s) from memory' and press 'Enter'
- To delete selected music, navigate to 'Delete selected music file(s) from memory' and press 'Enter'

In the next screen:

- To play song from internal memory, navigate to 'Internal memory' and press 'Enter'
- To play song from memory cards, navigate to your memory card (CF, USB, SD/MMC) and press 'Enter'
- To copy all songs, navigate to 'Copy all music file(s) to memory' and press 'Enter'
- To copy selected song, navigate to 'Copy selected music file(s) to memory' and press 'Enter'
- To delete selected song, use navigation buttons to select the pictures, press 'Enter' to select/deselect it.
- Navigate to 'DELETE' icon, and press 'Enter'

In the next screen:

- To play all music, navigate to 'Play all music file(s)' and press 'Enter'
- To play selected music, navigate to 'Choose individual music file(s)' and press 'Enter'

In the next screen:

- Use navigation buttons to select the music, press 'Enter' to select/deselect it.
- To play selected music, navigate to 'PLAY' icon, and press 'Enter'
- To copy selected music, navigate to 'COPY' icon, and press 'Enter'

## **Add Images from Bluetooth Phone**

- Plug Bluetooth USB Dongle into USB Port on the MemoryFrame™.
- Under Settings, confirm Bluetooth setting is set to "Accept all pictures (Default), or Prompt me".
- On a Bluetooth equipped phone, select the photo to be transferred and select "Send".
- Locate the MemoryFrame™ using the phone's Bluetooth scan option. Once located, the phone may need to be paired with the MemoryFrame™. (Note: Some phones may differ from these instructions. Please consult the phone's manual for additional info).
- If pairing is required, enter a 4 digit key on the phone to set the pairing key.
- Once the phone attempts connection, enter the 4 digit pairing key that was set on the phone as indicated in the screenshot.



- Once the photo has been transferred, if the Bluetooth setting on the MemoryFrame™ is set to “Prompt me”, the user will be presented with a prompt to accept the photo. If set to “Accept all pictures”, the frame will automatically display the transferred photo. Press “Menu” to close the transferred photo and return to the Main Menu.

## Display the Time:

While the slideshow is playing, press ‘Clock’ on the remote control to display the current time.

## To set Portrait/Landscape Mode:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Use ‘Up’ ‘Down’ buttons on the remote control to select ‘Settings’ and press ‘Enter’
- Use ‘Up’ ‘Down’ buttons on the remote control to select ‘Frame orientation’ and press ‘Enter’
- Navigate to ‘Landscape’ or ‘Portrait’ and press ‘Enter’

## To Set the Slide Duration:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slide duration’ and press ‘Enter’ on the remote control
- Navigate to the duration of your choice and press ‘Enter’ on the remote control
- (Optional) Press ‘Play’ to play the previous slideshow,

## To Set the Slide Transition:

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slide transition’ and press ‘Enter’ on the remote control
- Navigate to the transition of your choice and press ‘Enter’ on the remote control
- (Optional) Press ‘Play’ to play the previous slideshow

## To Toggle Picture order (Sequential or Random):

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Picture order - Sequential’ or ‘Picture order – Random’ and press ‘Enter’ on the remote control. This will toggle the picture order settings between ‘Sequential’ and ‘Random’.

## To Enable Auto Slideshow Update (Yes or No):

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Auto slideshow update - yes’ or ‘Auto slideshow update - no’ and press ‘Enter’ on the remote control. This will enable or disable updating of slideshow. If enabled, update will occur at the end of current slideshow.

## To Toggle Music order (Sequential or Random):

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Music option’ and press ‘Enter’ on the remote control
- Navigate to ‘Music order - Sequential’ or ‘Music order – Random’ and press ‘Enter’ on the remote control. This will toggle the music order settings between ‘Sequential’ and ‘Random’.

## To Enable Music Repeat (Yes or No):

- Press ‘Menu’ on the remote control to go to the Main Menu
- Navigate to ‘Settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Slideshow settings’ and press ‘Enter’ on the remote control
- Navigate to ‘Music option’ and press ‘Enter’ on the remote control
- Navigate to ‘Music repeat - Yes’ or ‘Music repeat – No’ and press ‘Enter’ on the remote control. This will enable/disable replaying of the music playlist. If this feature is disabled, music will stop at the end of the current playlist.

## Set Time:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Set Time' and press Enter on the remote control.
- Navigate to 'Up' 'Down' buttons on the remote control to set the day
- Navigate to 'Right' on the remote control to select 'day'
- Select 'Up' 'Down' buttons on the remote control to set the date
- Select 'Right' on the remote control to select 'year'
- Select 'Up' 'Down' buttons on the remote control to set the year
- Press 'Right' on the remote control to select 'hour'
- Select 'Up' 'Down' buttons on the remote control to set the hour
- Press 'Right' on the remote control to select 'minutes'
- Select 'Up' 'Down' buttons on the remote control to set the minutes
- Press 'Right' on the remote control to select 'AM/PM'
- Select 'Up' 'Down' buttons on the remote control to set the AM/PM
- Press 'Enter' on the remote control to set the time.

## Set Time Zone:

- Press 'Menu' on the remote control to go to the Main Menu
- Select 'Settings' and press 'Enter'
- Navigate to 'Set time zone' and press 'Enter'
- Select your time zone and press 'Enter'

## To Set Language:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter'
- Navigate to 'Language' and press 'Enter'
- Navigate to language of your choice and press 'Enter'

## To view Network Info:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Network info' and press 'Enter' on the remote control
- The Digital Picture Frame network info (IP address, DHCP, etc) will be displayed
- Press 'Enter' to go to the Main Menu
- (Optional) Press 'Play' to play the previous slideshow

## To Check Updates:

Frequently, we post updates that add features/enhancements to your Digital Picture Frame. To retrieve the updates:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Check updates' and press 'Enter' on the remote control
- If your Digital Picture Frame is already connected to the internet, it will check for any update
- If the update is available, navigate to 'OK' and press 'Enter' will download the updates
- Depending on the network speed, traffic, and the size of the updates, it might take a few minutes to download the updates
- If the update is available and you do not want to update at this time, navigate to 'Not at this time' and press 'Enter'
- Once the download is complete, the frame will upgrade the software and reboot upon completion.

## To enable Auto Check Update:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Auto Check Update – yes/no' and toggle 'Auto Check Update – yes/no' by pressing 'Enter' on the remote control

When Auto Check Update is enabled, frame will check for latest update when switched on.

## To Set Standby Time:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter'
- Navigate to 'Set standby time' and press 'Enter'
- Use 'Up' 'Down' buttons on the remote control to set the 'hours' when the Digital Picture Frame will turn off
- Press 'Right' on the remote control to select 'Off mins'
- Use 'Up' 'Down' buttons on the remote control to set the 'minutes' when the Digital Picture Frame will turn off
- Press 'Right' on the remote control to select 'Off AM/PM'
- Use 'Up' 'Down' buttons on the remote control to set the AM or PM
- Press 'Right' on the remote control to select 'On hours'
- Use 'Up' 'Down' buttons on the remote control to set the 'hours' when the Digital Picture Frame will turn on
- Press 'Right' on the remote control to select 'On mins'
- Use 'Up' 'Down' buttons on the remote control to set the 'minutes' when the Digital Picture Frame will turn on
- Press 'Right' on the remote control to select 'On AM/PM'
- Use 'Up' 'Down' buttons on the remote control to set the AM or PM
- Press 'Enter' on the remote control to set the standby time.

## To Enable Standby (Yes or No):

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control

- Navigate to 'Enable standby - yes' or 'Enable standby - no' and press 'Enter' on the remote control
- If standby is disabled, the Digital Picture Frame will not turn off at preset standby time.

### To Enable daylight saving time (Yes or No):

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Daylight time - yes' or 'Daylight time - no' and press 'Enter' on the remote control
- If enabled, the Digital Picture Frame will synchronize clock based on Daylight saving time.

### To Enable play rec'd pics only (Yes or No):

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Play rec'd pics only - yes' or 'Play rec'd pics only - no' and press 'Enter' on the remote control
- If enabled, the Digital Picture Frame will play received pictures only (received via email attachments, received from other shared frames, received from [www.MemoryFrame.com](http://www.MemoryFrame.com)).
- If disabled, the Digital Picture Frame will play the received pictures first and then resume the current slideshow.

### To Enable prompt me for new pics:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Prompt me for new pics - yes' or 'Prompt me for new pics - no' and press 'Enter' on the remote control
- If enabled, the Digital Picture Frame will play display confirmation when received pictures via email attachments, from other shared frames, or from [www.MemoryFrame.com](http://www.MemoryFrame.com).
- If disabled, the Digital Picture Frame will automatically receive and play the pictures.

### To Enable show online status:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Show OnLine status - yes' or 'Show OnLine status - no' and press 'Enter' on the remote control
- If enabled, the Digital Picture Frame will display online status icon while playing slideshow. Frame MUST be online to receive pictures via email attachments, from other shared frames, or from [www.MemoryFrame.com](http://www.MemoryFrame.com).

### To Set Bluetooth option:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Bluetooth' and press 'Enter' on the remote control
- Navigate to 'Accept all pictures', 'Reject all pictures', or 'Prompt me' and press 'Enter' on the remote control.

When 'Accept all pictures' option is selected, frame will accept all pictures beamed from Bluetooth phones or PDAs', when 'Reject all pictures' option is selected, frame will NOT accept any picture, when 'Prompt me' option is selected, frame will prompt user for any picture beamed from Bluetooth devices.

### Resume Previous Slideshow:

While the menu is displayed, press 'Play' button on the remote control will resume the previous slideshow.

### Auto Resume

If the menu stays idle for more than 15 minutes, previous slideshow will resume.

### To Restore Default Settings:

- Press 'Menu' on the remote control to go to the Main Menu
- Navigate to 'Settings' and press 'Enter' on the remote control
- Navigate to 'Restore default settings' and press 'Enter' on the remote control

### Supported Media Type:

- For pictures: Supports GIF, JPG, BMP, PNG.
- For audio: Supports WAV, MP3, WMA
- For video: Supports WMV encoded at 320X240 – Digital Picture Frame will play video at 640X480
- For DivX, MPEG1-2, or WMV video that is larger than 320X240, install the 'WMVConverter' and *encode* it before dropping it to the Digital Picture Frame.

### WMV Converter:

- You will need a computer to install WMVConverter.
- Insert the included CD into a CDRom drive of your computer,
- Go to the folder 'WMVConverter'
- Double click Setup.exe to install 'WMVConverter' to your computer.
- Follow the instructions to complete the installation
- After the installation is complete, go to 'Start' menu in your computer, 'WMVConverter – Digital Spectrum Inc', and launch 'WMVConverter – Digital Spectrum Inc'.
- Click on 'Browse' to browse to your video, click 'Start' to start the *encoding*. Once it is finished, the video will be stored in the same folder as the source video. The converted video will have \_DSI appended to its original filename.
- *If you encounter an error "ClassFactory cannot supply requested class" when you convert your video, go to the folder 'WMVConverter'*
- *Install WMEncoder.exe.*
- *Convert your video again*

## PC Connection:

### Via USB cable:

- Connect your computer to the Digital Picture Frame using the USB cable.
- Click on 'Explore' to view the file contents of the Digital Picture Frame.
- To drop media to internal storage, double click on the drive letter that pertains to the picture frame.
- You can drag and drop media in here. The internal storage capacity is 256Mb, of which 40Mb is reserved. There is roughly 216Mb of user space.

## Specifications:

| Model                 | MF-8000 Premium                                                                                                                                                                                                          | MF-8104 Premium           | MF-8115 Premium          |
|-----------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|--------------------------|
| Unit Size H x W x D   | 8.5" x 10.5" x 2"                                                                                                                                                                                                        | 8.5" x 10.5" x 2"         | 13" x 15.625" x 2.25"    |
| Display Area          | 4.8" H x 6.4" W                                                                                                                                                                                                          | 6.5" H x 8.5" W           | 9.125" H x 12" W         |
| Resolution            | 800x600                                                                                                                                                                                                                  | 800x600,640x480           | 1024x768                 |
| Colors                | 262,144                                                                                                                                                                                                                  |                           |                          |
| Brightness            | 250cd/m <sup>2</sup> max.                                                                                                                                                                                                | 250cd/m <sup>2</sup> max. | 260cd/m <sup>2</sup> max |
| Contrast ratio        | 250:1                                                                                                                                                                                                                    | 500:1                     | 350:1                    |
| Viewing angle         | 65/65 (l/r) 45/35(u/d)                                                                                                                                                                                                   |                           |                          |
| Input voltage :       | AC110—240V(50HZ—60HZ)                                                                                                                                                                                                    |                           |                          |
| Operating Temperature | 0°C - 50°C                                                                                                                                                                                                               |                           |                          |
| Unit Weight           | 4.2 lbs.                                                                                                                                                                                                                 | 4.3 lbs.                  | 5.6 lbs.                 |
| Formats               | JPEG, BMP, MP3, WMA, WMV                                                                                                                                                                                                 |                           |                          |
| Media                 | CF/SD/XD/MMC                                                                                                                                                                                                             |                           |                          |
| Max Image Size        | 10MP                                                                                                                                                                                                                     |                           |                          |
| Default Start Mode    | Auto Slide Show jpeg                                                                                                                                                                                                     |                           |                          |
| Photo Playback Mode   | <ol style="list-style-type: none"><li>1. Loop</li><li>2. Auto Slide Show</li><li>3. Slide Show with background MP3 music</li><li>4. Interval Time Setup</li><li>5. Transition Setup</li><li>6. Play/Stop/Pause</li></ol> |                           |                          |
| Music Playback Mode   | <ol style="list-style-type: none"><li>1. Play/Stop/Pause</li><li>2. Volume Adjust</li><li>3. Mute Function</li><li>4. Repeat Mode Setup</li></ol>                                                                        |                           |                          |
| Video Playback Mode   | <ol style="list-style-type: none"><li>1. Play/Stop/Pause</li><li>2. Volume Adjust</li><li>3. Mute Function</li></ol>                                                                                                     |                           |                          |
| Accessories           | <ol style="list-style-type: none"><li>1. Remote Controller</li><li>2. AC Adapter</li><li>3. Desktop stand</li><li>4. Operation manual</li><li>5. Setup CD</li><li>6. xD Card Reader</li></ol>                            |                           |                          |



**Digital Spectrum Solutions**

Digital Spectrum Solutions, Inc.  
Irvine, CA 92614  
[www.dsicentral.com](http://www.dsicentral.com)  
Contact us at [support@dsicentral.com](mailto:support@dsicentral.com)  
700-0036

